

The below option will email full breakdown of the serial number

 [Excel](#)  [PDF](#)

**Sales Model:** 3520

**Build Date:** 2008

[Feature Code](#)

[Part Numbers](#)

[Ship Loose](#)

[Help](#)

**Feature Codes [Top](#)**

34 results found, displaying 1 to 34

Reference Number	Eng Chg	Quantity	ASM LESS	Set Type	Description
520GE10	F	1	I		G3520C 1800RPM PKG JW-90C 10
OGNPM9F	F	1	I		GEN 827 FRAME PM 2 BRG 9F
EMCMETU	F	1	I		METRIC DISPLAY UNITS
EMCEFR1	F	1	I		RELAY GP
EMCAM07	F	1	I		ALARM MODULE - NFPA 110 07
RPA0223	F	1	I		827 FRAME GENERATOR REMOVAL
LVEXB02	F	1	I		LOW VOLTAGE EXTENSION BOX
CAACBX1	F	1	I		CABLE ACCESS BOX
RTD0003	F	1	I		BEARING TEMPERATURE RTD 03
SOV2403	F	1	S		SOLENOID VALVE
BAT2417	F	1	S		24 VOLT BATT SET-DRY-2600CCA
BATRM01	F	1	I		STANDARD BATTERY REMOVAL
EXRVAL7	F	1	I		EXPLOSION RELIEF VALVE
BARGP01	F	1	I		ENGINE BARRING GROUP
ACLRM06	F	1	I		AIR CLEANER REMOVAL
FSREG02	F	1			REGULATOR-GAS
60H4160	F	1	I		60HZ 4160 VOLTS
CONTINU	F	1	I		CONTINUOUS APPLICATION
MSEPGGN	F	1	I		GENERAL EPG (NON-ENCLOSED)
SWP0001	F	1	I		SHRINK WRAP PROTECTION
LITPAPR	F	4	S		ADDITIONAL PARTS BOOKS
LITENGE	F	4	S		EXTRA ENGLISH LITERATURE
TRSGEN7	F	1	I		PGS TEST REPORT @ 0.8 PF
TRSGEN1	F	1	I		GENERATOR TEST REPORT
PSD07	F	1	I		ENGINE DISTR DISCOUNT PRGM
MSCEC70	F	1	I		ENERGY UTILITIES
MWCODEN	F	1	I		CONTINUOUS (BASE LOAD)
LANENGO	F	1	I		ENGLISH LANGUAGE OPTION
ACTEMPK	F	1	I		85C/54C TWO STAGE
EMISS12	F	1	I		1.0 G/BHP-HR NOX
JWTEMP1	F	1	I		90C JACKET WATER OUTLET
KW02055	F	1	I		2055 EKW W/O FAN
NGASFUE	F	1	I		NATURAL GAS FUEL

**Part Numbers [Top](#)**

122 results found, displaying 1 to 122

Reference Number	Eng Chg	Quantity	ASMLESS	Set Type	Description	BreakDown...
LA4306	06	1	I		G3520C 1800RPM PKG, 90C LH JW	<a href="#">BreakDown...</a>
2603694	01	1	I		ENGINE ARR - G3520C	<a href="#">BreakDown...</a>
2W8772	04	1	I		FLYWHEEL GP	<a href="#">BreakDown...</a>
1531237	01	1	I		GEAR GP-ACC	<a href="#">BreakDown...</a>
1908839	01	1	I		FASTNER GROUP	<a href="#">BreakDown...</a>
1908842	00	1	I		PLUG GROUP	<a href="#">BreakDown...</a>
1908843	00	1	I		DRAIN GP	<a href="#">BreakDown...</a>
1916658	00	1	I		MOTOR GP - ELEC	<a href="#">BreakDown...</a>
2006406	04	1	I		MANIFOLD GROUP	<a href="#">BreakDown...</a>
2006412	02	1	I		REGULATOR GROUP	<a href="#">BreakDown...</a>
2006433	04	1	I		LINES GP-WATER (UPPER)	<a href="#">BreakDown...</a>
2006448	02	1	I		AFTERCOOLER GP	<a href="#">BreakDown...</a>
2006469	06	1	I		LINES GP-WATER (LOWER)	<a href="#">BreakDown...</a>
2040854	00	1	I		CAMSHAFT GROUP -S	<a href="#">BreakDown...</a>
2046483	03	1	I		COVER GROUP REAR	<a href="#">BreakDown...</a>
2050359	04	1	I		LINES GP-WATER(VENT)	<a href="#">BreakDown...</a>
2059452	08	1	I		CONT GP	<a href="#">BreakDown...</a>
2064152	08	1	I		TURBO GROUP	<a href="#">BreakDown...</a>
2064164	09	1	I		LINES GROUP AIR	<a href="#">BreakDown...</a>
2064169	11	1	I		MANIFOLD GROUP-EXH	<a href="#">BreakDown...</a>
2064177	05	1	I		ELBOW GP-AIR IN	<a href="#">BreakDown...</a>
2064180	04	1	I		MOUNTING GROUP FUEL	<a href="#">BreakDown...</a>
2064183	05	1	I		LINES GROUP FUEL	<a href="#">BreakDown...</a>
2072451	06	1	I		SENSOR GP-MTG	<a href="#">BreakDown...</a>
2090819	04	1	I		CONNECTION GP	<a href="#">BreakDown...</a>
2093427	06	1	I		FILTER GP-OIL	<a href="#">BreakDown...</a>
2094749	04	1	I		WIRING GP	<a href="#">BreakDown...</a>
2098232	09	1	I		PUMP GP-WATER	<a href="#">BreakDown...</a>
2111074	02	1	I		BREATHER GROUP	<a href="#">BreakDown...</a>
2146106	03	1	I		PLUG GP	<a href="#">BreakDown...</a>
2163700	03	1	I		CONTROL GP	<a href="#">BreakDown...</a>
2202967	05	1	I		LINES GROUP AIR	<a href="#">BreakDown...</a>
2218452	00	1	I		PISTON GP.	<a href="#">BreakDown...</a>
2227872	09	1	I		IGNITION GP	<a href="#">BreakDown...</a>
2273184	00	1	I		SHIELD GROUP MANIFOLD	<a href="#">BreakDown...</a>
2273185	01	1	I		SHIELD GROUP EXHAUST	<a href="#">BreakDown...</a>
2284142	06	1	I		WIRING GP	<a href="#">BreakDown...</a>
2312320	00	1	I		SHIELD GP	<a href="#">BreakDown...</a>
2200468	01	1	I		COVER AS-BAIL	<a href="#">BreakDown...</a>
2239772	00	1	I		GAGE GROUP - OIL	<a href="#">BreakDown...</a>
2407976	01	1	I		COVER GROUP FRONT	<a href="#">BreakDown...</a>
2414170	04	1	I		LINES GP-WATER	<a href="#">BreakDown...</a>
2006405	09	1	I		LINES GROUP - ENGINE OIL	<a href="#">BreakDown...</a>
2878181	01	1	I		LINES GP-WATER	<a href="#">BreakDown...</a>
2781349	00	1	I		GEAR GP - FRONT	<a href="#">BreakDown...</a>

3053760	01	1	I	DAMPER GP	<a href="#">BreakDown...</a>
1627463	01	1	I	GUARD GP-DAMPER	<a href="#">BreakDown...</a>
2057860	08	1	I	FILM GP - 17 DIGIT PIN	<a href="#">BreakDown...</a>
LE6536	11	1	I	G3520C 1800RPM PKG JW-90C 10	<a href="#">BreakDown...</a>
- 3L0456		1	I	PROCEDURE - DVR PROG AND TEST	<a href="#">BreakDown...</a>
- 3L0462		1	I	TEST- GAS GENSET	<a href="#">BreakDown...</a>
- 3L0467		1	I	TWO BEARING GEN ALIGNMENT-3500	<a href="#">BreakDown...</a>
- 3N7056	00	2	S	BATTERY RACK	<a href="#">BreakDown...</a>
- 5N7562	00	1	I	NOTE-CONTROL PANEL MTG (REAR)	<a href="#">BreakDown...</a>
- 5P2506	00	1	S	LITERATURE - ENGLISH	<a href="#">BreakDown...</a>
- 7W0825	01	2	S	BATTERY CABLES	<a href="#">BreakDown...</a>
- 2830781	00	541	I	OIL-BULK-1 LITER: DO NOT DRAIN	<a href="#">BreakDown...</a>
- 1044704	04	1	I	MTG GP - CONTROL PNL (EMCP II)	<a href="#">BreakDown...</a>
- 1216202	10	1	I	REGULATOR GP	<a href="#">BreakDown...</a>
- 1218855	07	1	I	CONNECTION GP	<a href="#">BreakDown...</a>
- 1411809	03	1	I	BOX GP-BASIC	<a href="#">BreakDown...</a>
- 1981905	00	1	I	PAINT - FINISH	<a href="#">BreakDown...</a>
- 2085885	02	1	I	RAIL GP	<a href="#">BreakDown...</a>
- 2162912	01	1	I	EMCPII+	<a href="#">BreakDown...</a>
- 2203435	00	1	S	MOUNTING GP - ISOLATOR	<a href="#">BreakDown...</a>
- 2210752	00	1	I	SPACE HEATER RELAY	<a href="#">BreakDown...</a>
- 2295706	04	1	I	SENSOR GP-ENGINE	<a href="#">BreakDown...</a>
- 2324878	01	1	I	BATTERY DISCONNECT SWITCH	<a href="#">BreakDown...</a>
- 2413378	02	1	I	WIRING GP (CBDVR +EMCP II)	<a href="#">BreakDown...</a>
- 2087482	00	1	I	TEST - GEN ELE SYS LE	<a href="#">BreakDown...</a>
- 1219640	05	1	I	CONNECTION GP - INTERCONNECT	<a href="#">BreakDown...</a>
- 9Y8220	01	1	S	INDICATOR GP	<a href="#">BreakDown...</a>
- 3N8594	06	4	I	COVER GP-ENG/GEN LIFT EYE	<a href="#">BreakDown...</a>
- 2470305	04	1	I	INSTALLATION AR	<a href="#">BreakDown...</a>
LE6563	06	1	I	GEN 827 FRAME PM 2 BRG 9F	<a href="#">BreakDown...</a>
1442004	03	1	I	GENERATOR AR-PWR(A756)	<a href="#">BreakDown...</a>
2406834	02	1	I	HARNES AS (EMCP II MED VOLTAG	<a href="#">BreakDown...</a>
1449068	03	1	I	TRANSFORMER-CURRENT	<a href="#">BreakDown...</a>
1787193	01	1	I	TRANSFORMER GP	<a href="#">BreakDown...</a>
1214714	00	1	I	METRIC DISPLAY UNITS	<a href="#">BreakDown...</a>
LE0320	01	1	I	ENGINE FAILURE RELAY	<a href="#">BreakDown...</a>
1341157	01	1	I	ENGINE FAILURE RELAY	<a href="#">BreakDown...</a>
LE0305	01	1	I	ALARM MODULE - 8 LIGHTS	<a href="#">BreakDown...</a>
1879371	04	1	I	MODULE GP	<a href="#">BreakDown...</a>
LE6538	05	1	I	827 FRAME GEN REMOVAL FOR THE	<a href="#">BreakDown...</a>
LE0608	00	1	I	EXTENSION BOX - LOW VOLTAGE	<a href="#">BreakDown...</a>
1223487	03	1	I	LOW VOLTAGE EXTENSION BOX	<a href="#">BreakDown...</a>
LE0609	01	1	I	CABLE ACCESS BOX	<a href="#">BreakDown...</a>
1221194	01	1	I	CABLE ACCESS BOX	<a href="#">BreakDown...</a>
LE0615	00	1	I	BEARING TEMPERATURE RTD	<a href="#">BreakDown...</a>
1414160	00	1	I	BEARING TEMPERATURE RTD	<a href="#">BreakDown...</a>

LE6570	00	1	I	AIR CLEANER REMOVAL	<a href="#">BreakDown...</a>
LA3782	00	1	I	G3520C FUEL REGULAT0R	<a href="#">BreakDown...</a>
- 2102007	02	1	S	REGULATOR GP	<a href="#">BreakDown...</a>
LA3784	00	1	I	FUEL SHUTOFF VALVE FOR G3520C	<a href="#">BreakDown...</a>
9Y6992	05	1	S	VALVE GP	<a href="#">BreakDown...</a>
LE0176	06	1	I	OVERSIZE BATTERY - 2600CCA	<a href="#">BreakDown...</a>
7L7872	09	2	S	24 VOLT BATTERY SET - DRY	<a href="#">BreakDown...</a>
LE0952	04	1	I	REMOVAL AR, BATTERIES, CABLES,	<a href="#">BreakDown...</a>
LA3768	00	1	I	60 AMP ALTERNATOR	<a href="#">BreakDown...</a>
- 2134520	02	1	I	GUARD GP	<a href="#">BreakDown...</a>
- 2128212	04	1	I	MOUNTING GP	<a href="#">BreakDown...</a>
- 2168354	01	1	I	WIRING GP	<a href="#">BreakDown...</a>
- 4N3986	16	1	I	ALTERNATOR - 24V - 60 AMP	<a href="#">BreakDown...</a>
- 1718947	03	1	I	DRIVE GP-ACC (UPPER LH)	<a href="#">BreakDown...</a>
LA3775	00	1	I	G3520C EXPLOSION RELIEF VALVES	<a href="#">BreakDown...</a>
2349968	05	1	I	COVER GP (CENTRAL STRUCTURE)	<a href="#">BreakDown...</a>
LA4224	00	1	I	BARRING GP-RIGHT HAND	<a href="#">BreakDown...</a>
2572143	01	1	I	ENGINE BARRING GROUP (RH)	<a href="#">BreakDown...</a>
5N9599		1	I	60HZ 4160 VOLTS	<a href="#">BreakDown...</a>
9Y8164		1	I	CONTINUOUS POWER APPLICATION	<a href="#">BreakDown...</a>
0V1065		1	I	END USE: GENERAL EPG	<a href="#">BreakDown...</a>
0P7607		1	I	SHRINK WRAP PROTECTION - 3516	<a href="#">BreakDown...</a>
0V1672		4	S	ADDITIONAL PARTS BOOKS	<a href="#">BreakDown...</a>
0P9715		4	S	EXTRA ENGLISH LITERATURE	<a href="#">BreakDown...</a>
0P1793		1	I	PGS TEST REPORT @ 0.8 PF	<a href="#">BreakDown...</a>
0P1530		1	I	GENERATOR TEST REPORT	<a href="#">BreakDown...</a>
LL0572	00	1	I	2889 BHP 2055 EKW WOF FAN 60 H	<a href="#">BreakDown...</a>
- 0K6498		1	I	2154 BKW (2889 BHP) @ 1800 RPM	<a href="#">BreakDown...</a>
CA0866	07	1	I	ENGLISH LANGUAGE OPTION	<a href="#">BreakDown...</a>
0V2330		1	I	DTO QUOTE CORRECTION	<a href="#">BreakDown...</a>
2057860	08	1	I	L FILM GP - 17 DIGIT PIN	<a href="#">BreakDown...</a>

## Ship Loose [Top](#)

40 results found, displaying 1 to 40

Reference Number	Eng Chg	Quantity	ASM LESS	Set Type	Description	BreakDown...
		1	S			<a href="#">BreakDown...</a>
ESO		1	S		(PRNT ESO COPY)	<a href="#">BreakDown...</a>
PML		1	S		CHK PM FOR FILMS	<a href="#">BreakDown...</a>
0V1672		1	S			<a href="#">BreakDown...</a>
2V7397		2	S		CABLE AS	<a href="#">BreakDown...</a>
3B6552		1	S		ELBOW-PIPE	<a href="#">BreakDown...</a>
3K1715		2	S		CABLE AS	<a href="#">BreakDown...</a>
3N7054		2	S		SUPPORT AS-BAT	<a href="#">BreakDown...</a>
3N7055		2	S		BOARD	<a href="#">BreakDown...</a>
3N7056		1	S		SUPPORT GP-BAT	<a href="#">BreakDown...</a>
3V6785		2	S		CABLE AS	<a href="#">BreakDown...</a>
5L3233		1	S		FITTING-SAFETY	<a href="#">BreakDown...</a>

5P2506	1	S	LITERATURE GP	<a href="#">BreakDown...</a>
6L4502	1	S	PROD MARKING SYS	<a href="#">BreakDown...</a>
7L7872	1	S	BATTERY GP -B	<a href="#">BreakDown...</a>
7N5274	2	S	COVER-TERMINAL	<a href="#">BreakDown...</a>
7W0825	1	S	CABLE GP	<a href="#">BreakDown...</a>
8L8413	4	S	STRAP-CABLE	<a href="#">BreakDown...</a>
8N0869	2	S	COVER-TERMINAL	<a href="#">BreakDown...</a>
8N1725	2	S	COVER-TERMINAL	<a href="#">BreakDown...</a>
8T4994	10	S	WASHER-HARD	<a href="#">BreakDown...</a>
9G0003	4	S	COVER-TERMINAL	<a href="#">BreakDown...</a>
9G0004	4	S	COVER-TERMINAL	<a href="#">BreakDown...</a>
9G8909	2	S	COVER-TERMINAL	<a href="#">BreakDown...</a>
9X9730	4	S	BATTERY-12 VOLT	<a href="#">BreakDown...</a>
9Y6992	1	S	VALVE GP-SOL	<a href="#">BreakDown...</a>
9Y8220	1	S	INDICATOR GP -E	<a href="#">BreakDown...</a>
9Y8869	1	S	INDICATOR	<a href="#">BreakDown...</a>
1218855	1	S	CONNECTION GP -G	<a href="#">BreakDown...</a>
1442004	1	S	GENERATOR AR-PWR	<a href="#">BreakDown...</a>
1716719	1	S	PARTS KIT	<a href="#">BreakDown...</a>
1716721	1	S	PARTS KIT	<a href="#">BreakDown...</a>
1785048	10	S	ISOLATOR AS	<a href="#">BreakDown...</a>
2102007	1	S	REGULATOR GP -A	<a href="#">BreakDown...</a>
2203435	1	S	MTG GP-ISOLATORS	<a href="#">BreakDown...</a>
SEBP3869	4	S	PTSBK	<a href="#">BreakDown...</a>
SEBU6400	5	S	LUBE	<a href="#">BreakDown...</a>
SEBU7681	5	S	OMM	<a href="#">BreakDown...</a>
SELF5419	5	S	WARRANTY	<a href="#">BreakDown...</a>
SERP3869	5	S	PTSCD	<a href="#">BreakDown...</a>